



R147

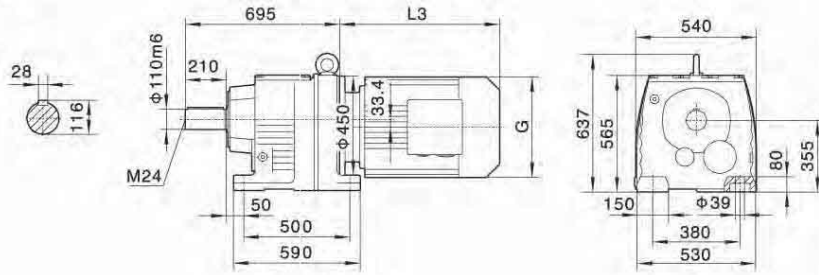


电机需方配时或配特殊电机时需加联接法兰  
When equipping the user's motor or the special one, the flange is required to be connected.

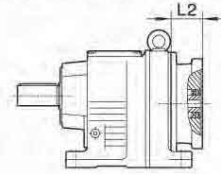


RF147


Φ450

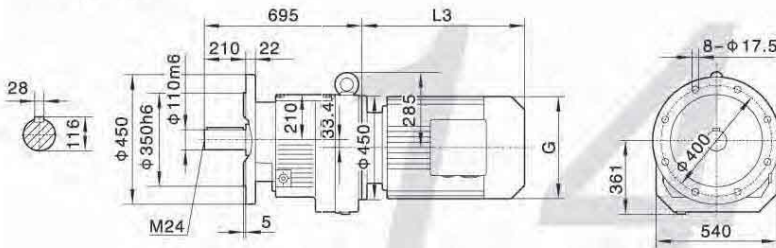


R..S147

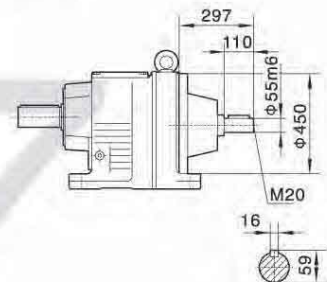

Φ550

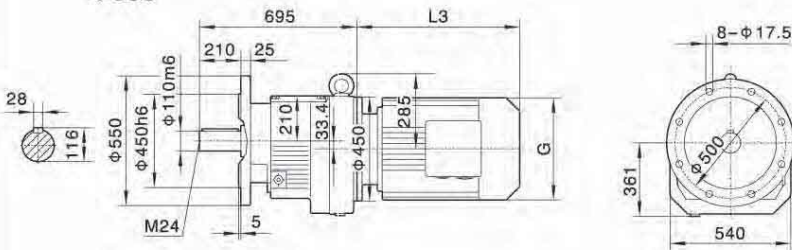

R..147R87(R77)

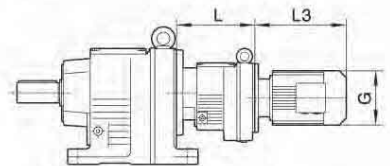

|   |             |             |
|---|-------------|-------------|
|   | R..147R77组合 | R..147R87组合 |
| L | 226         | 275         |

注：其余尺寸见相应的结构形式  
Note: For other values please refer to the oppsited structure

| Y2电机机座号<br>Motor size | 160M | 160L | 180M | 180L | 200 | 225S | 225M | 250 | 280S | 280M |
|-----------------------|------|------|------|------|-----|------|------|-----|------|------|
| 功率/4P<br>Power/(kW)   | 11   | 15   | 18.5 | 22   | 30  | 37   | 45   | 55  | 75   | 90   |
| L3                    | 567  | 602  | 583  | 616  | 654 | 674  | 696  | 775 | 845  | 845  |
| G                     | 330  | 330  | 380  | 380  | 420 | 470  | 470  | 510 | 580  | 580  |
| L2                    | 132  | 132  | 132  | 132  | 132 | 143  | 143  | 174 | 174  | 174  |

注：“R..”表示R、RF      Note：“R..”mean R、RF