



R97

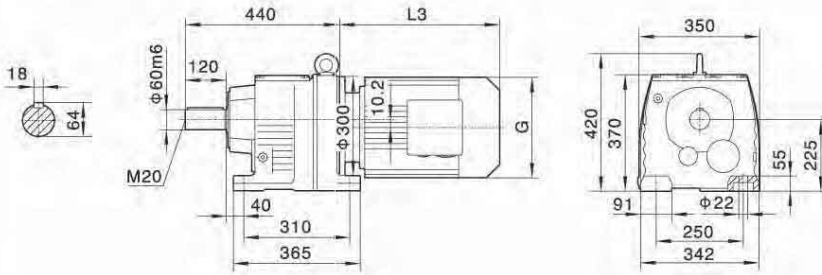


电机需配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

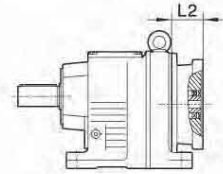


RF97


Φ350

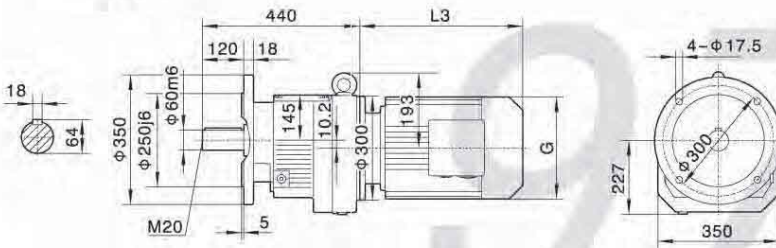


R..S97

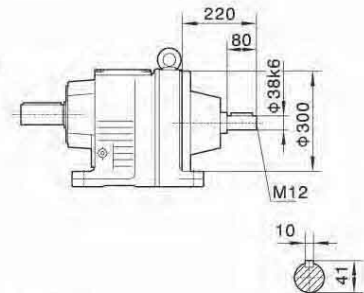

Φ450

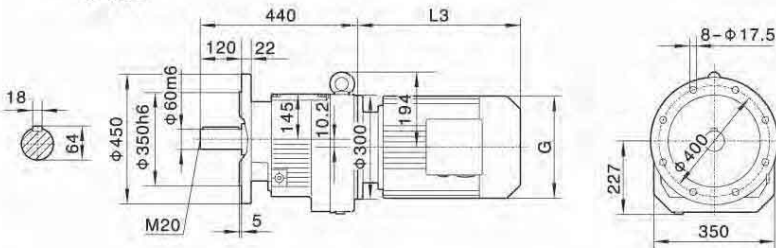

R..97R57

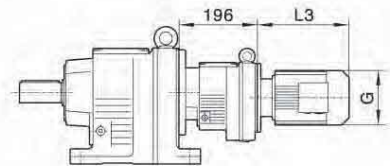

注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y2电机机座号 Motor size	80	90S	90L	100	112M	132S	132M	160M	160L	180M	180L	200	
功率/4P Power/(kW)	0.55 0.75	1.1	1.5	2.2 3.0	4.0	5.5	7.5	11	15	18.5	22	30	
L3	246	280	304	315	334	425	461	524	547	555	588	654	
G	175	195	195	215	240	275	275	330	330	380	380	420	
L2	86	86	86	101	101	101	101	126	126	126	126	132	

注：“R..”表示R、RF

Note：“R..”mean R、RF

R