



R167

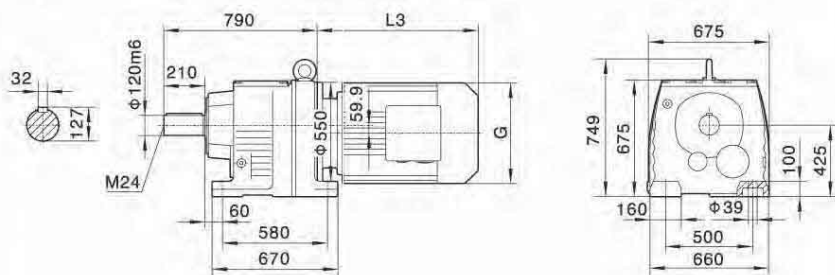


电机需方配时或配特殊电机时需加联接法兰  
When equipping the user's motor or the special one, the flange is required to be connected.

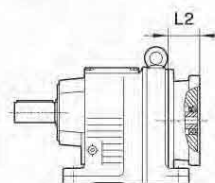


RF167


Φ550

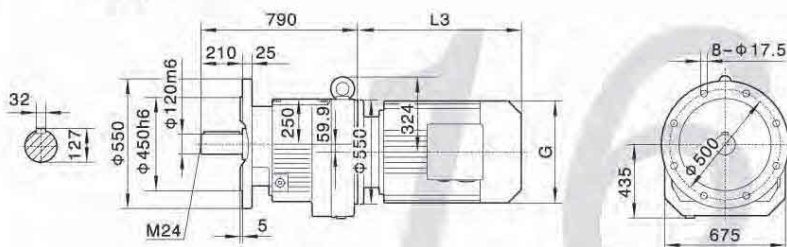


R..S167

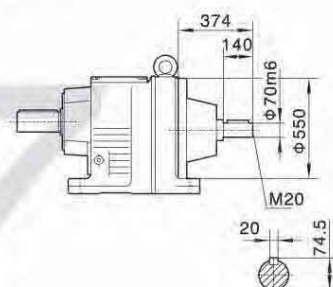

Φ660

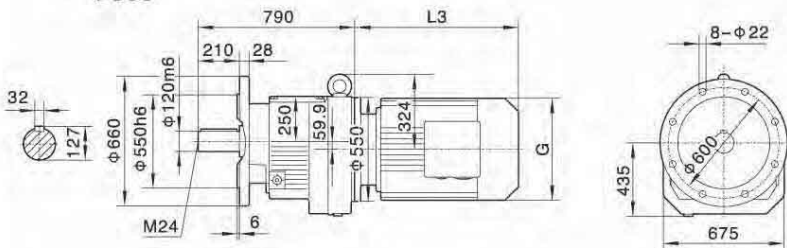

R..167R97(R107)

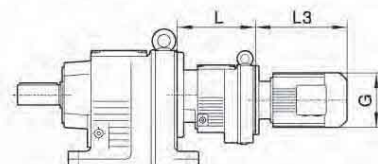

	R..167R97组合	R..167R107组合
L	320	370

注：其余尺寸见相应的结构形式  
Note: For other values please refer to the opposite structure

Y <sub>2</sub> 电机机座号 Motor size	160M	160L	180M	180L	200	225S	225M	250	280S	280M	315S	315M	315L
功率/4P Power/(kW)	11	15	18.5	22	30	37	45	55	75	90	110	132	160
L3	567	602	635	666	642	669	691	770	828	879	1100	1130	1360
G	330	330	380	380	420	470	470	510	580	580	645	645	645
L2	143	143	143	143	143	143	143	113	113	113	113	145	145

注：“R..”表示R、RF

Note：“R..”mean R、RF

R