



R67

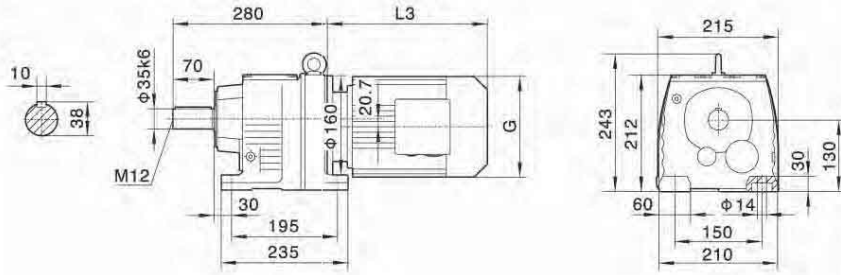


电机需方配时或配特殊电机时需加联接法兰  
When equipping the user's motor or the special one, the flange is required to be connected.

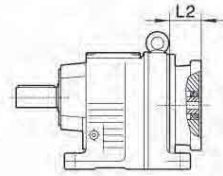


RF67


Φ200

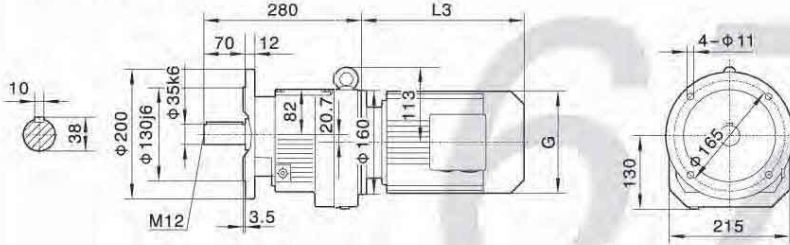


R..S67

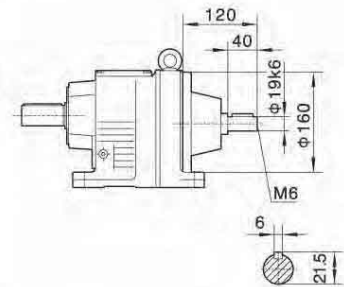

Φ250

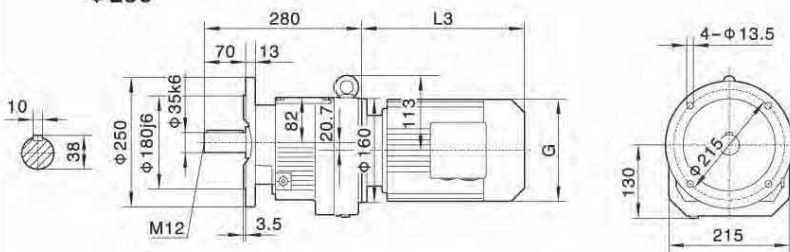

R..67R37

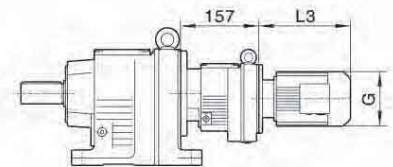

注：其余尺寸见相应的结构形式  
Note: For other values please refer to the opposite structure

Y2电机机座号 Motor size	63	71		80		90S	90L	100L		112M	132S	132M	
功率/4P Power/(kW)	0.18	0.25	0.37	0.55	0.75	1.1	1.5	2.2	3.0	4.0	5.5	7.5	
L3	223	245		278		304	328	350		380	425	461	
G	130	145		175		195	195	215		240	275	275	
L2	81	81		81		81	81	93		93	101	101	

注：“R..”表示R、RF

Note：“R..”mean R、RF